



**RAVENHEAT**<sup>®</sup>  
MANUFACTURING LIMITED

## USER'S GUIDE

### WALL HUNG COMBINATION BOILER

RSF 820/20 (T)

G.C. No. 47 581 05

This appliance is for use on natural gas only. It is the law that all gas appliances are installed by a competent person, in accordance with the gas safety installation and use regulations B.S.5440:2 - (2000).

All CORGI registered installers carry a CORGI I.D. card and have a registration number. Both should be recorded in your boiler log book. You can check your installer by calling CORGI direct on: 01256 732300.



*The code of practice for the installation,  
commissioning & servicing of central heating systems*

#### INTRODUCTION

Please carefully read information given in the booklet to help you gain maximum control from your appliance with minimum trouble and cost.

Your Ravenheat Combination Boiler has been designed to supply your Central Heating and Domestic Hot Water directly from one unit. When Central Heating is operating the circulation will be interrupted when domestic hot water is being drawn off. This will normally not affect the level of heating.

#### CLEARANCES AROUND THE BOILER

Minimum clearances are required for safety and maintenance. Do not obstruct any purpose made ventilation opening if boiler has been fitted in a compartment.

Never hang clothes, etc. over the appliance.

Above 200mm (8 inches)

Below 150mm (6 inches)

Front 450mm (18 inches)

Sides 75mm (3 inches)

25mm (1 inch) in front when installed in a cupboard.

#### USER CONTROLS

See Fig. 1

This appliance is designed to operate with the minimum of attention by the user. All controls are to be found on the control panel.


#### OPERATING SAFETY CHECKS TO PROTECT YOUR APPLIANCE

Before lighting the appliance check central heating system pressure (7) is not less than 1 bar gauge. If it is below this do not light but consult your installer about refilling your system as you may have a leak in the system.

- 1.0 Lighting the Pilot
- 1.1 Switch on electrical supply at mains.
- 1.2 Switch on neon boiler on/off switch (1).
- 1.3 Ensure that gas supply to appliance is on.
- 1.4 Press the gas control knob (3) and hold in. After a few seconds igniter will light pilot flame. View through the window. Hold gas control knob for 15 seconds then slowly release. Pilot should then remain alight. If the pilot does not remain alight or goes out for any other reason, wait 3 minutes and repeat the procedure as above.  
\* Neon switch (1) must remain lit whenever pilot is required to be alight.



Fig. 1

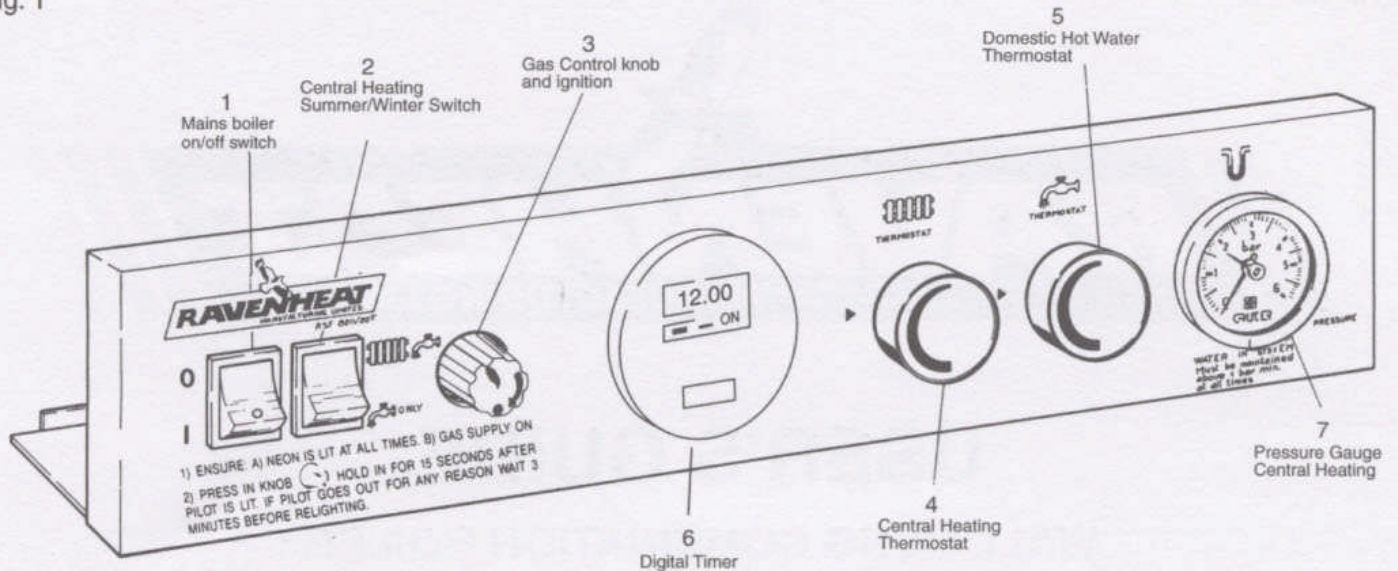

### OPERATING DOMESTIC HOT WATER

- 2.0 Ensure pilot is alight. See 1.0.
- 2.1 Select only switch position (2).
- 2.2 Open hot water tap. If pilot is alight main burner will always operate.
- 2.3 Temperature of domestic hot water can be varied by adjusting the water flow rate at the tap. Domestic thermostat (5) will control maximum temperature leaving the appliance. The knob can be set between minimum and maximum approximately 35C to 65C (95F to 149F). For maximum temperature of domestic hot water leave in maximum position.

### OPERATING HEATING & HOT WATER

- 3.0 Ensure pilot is alight. See 1.0.
- 3.1 Select switch (2) position.
- 3.2 Switch on any external time clock, adjust room stat and/or thermostatic radiator valves to high settings.
- 3.3 Main burner will operate. Temperature output of central heating can be adjusted by central heating thermostat (4). The knob can be set between minimum and maximum approximately 60C to 85C (140F to 185F). While the appliance is being used to provide domestic hot water the central heating will not operate. When hot water is no longer required the appliance will automatically revert to central heating and should not noticeably affect the level of central heating. Adjust external controls to required settings.

### TO SHUT DOWN THE APPLIANCE

For short periods, switch to only and turn off all hot taps. Pilot will stay alight and fan will run at low speed. For long periods, extinguish pilot by turning gas control knob (3) clockwise and turn off on/off switch (1).

If the appliance is to be shut down for long periods when there is a risk of freezing, then appliance should be drained.

Similar refilling must be done by a competent person following approved procedures.

### CLEANING OF APPLIANCE OUTER CASING

Use a clean damp cloth. Do not use any abrasive cleaners end with a dry cloth and lightly polish to protect painted surfaces.

Control panel and fixtures can be wiped with damp cloth and dried. Spray polishes must not be used on control panel surfaces or switches. Care must be taken in preventing any liquids entering the appliance.

### CARE OF YOUR APPLIANCE AND SYSTEM

Annual servicing of your appliance is required to maintain safety and efficiency of its operation. Therefore it is recommended that the appliance is serviced at least once a year and that the whole of the heating system be checked at the same time.

### SERVICING SHOULD BE CARRIED OUT BY A TRAINER SERVICE ENGINEER.


Ravenheat Manufacturing Ltd.,  
Chartists Way, Morley, Leeds, LS27 9ET.



## PROGRAMMABLE TIMECLOCK INSTRUCTIONS FOR USE

Your Ravenheat boiler comes complete with (optional) digital programmer. The timeclock is supplied with a cover to prevent accidental loss of programme, or children tampering with pre-set programmes.

### 5. TO PROGRAMME TIMECLOCK

To access programming buttons remove clear cover. Press  reset key with a pencil before setting or reprogramming times.

#### 5.1.1 TO SET TIME AND DAY OF THE WEEK:

##### 5.1.1.1 SET DAY OF WEEK:

- Press clock button and hold in.
- Press day button to desired day.
- Release both buttons.
- The day of the week will be set.

##### 5.1.1.2 SET HOUR:

- Press clock button and hold in.
- Press hour button to desired time.
- Release both buttons.
- The hour will be set.

##### 5.1.1.3 SET MINUTE:

- Press clock button and hold in.
- Press minute button to desired time.
- Release both buttons.
- The minute will be set.

**NOTE:** When, setting time holding in the hour/minute button this will rapidly advance the display.

#### 5.1.2 TO SET PROGRAMMES:

5.1.2.1 Press timer button and release to enter into programme mode.

5.1.2.2 Programme "1 ON" will show in lower left hand corner.


5.1.2.3 Press **DAY** key to select the programme period. There are 10 day settings for your choice.  
(1) Mo to Su (2) Mo (3) Tu (4) We (5) Th  
(6) Fr (7) Sa (8) Su (9) Mo+Tu+We+Th+Fr  
(10) Sa+Su.

You now have a choice of 6 programmes.

5.1.2.4 Press hour button to set the required hour 'on'.

5.1.2.5 Press minute button to set minute.

5.1.2.6 After setting the programme press **TIMER** key again "1 OFF" will appear. Repeat procedure 5.1.2.3 through to 5.1.2.5 to set programme "1 OFF" TIME.

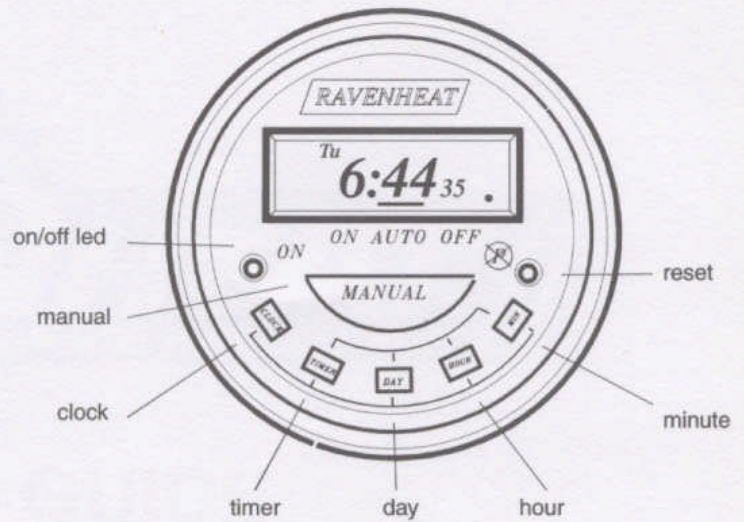

For each programme days 'off' setting must be input the same as the 'on' setting.

5.1.2.7 After setting programme 1 ON/OFF TIME repeat step 2.1 to 2.7 to set programmes 2 through to 6 if required.

5.1.2.8 Your timer gives you up to 6 different ONE and 6 different OFF settings per programme period. Note you have a choice of 6 ON-6 OFF programmes max.

##### 5.1.2.8.1 REVIEW YOUR PROGRAMMES:

- Press the **TIMER** key to advance display to each subsequent ON or OFF setting.
  - Check days and times displayed.
  - To make a change, follow instructions under "TO SET PROGRAMMES".
- Note on completion of programming operations press the clock button to show current time/day and replace the clear tamper proof cover.

##### 5.1.2.8.2 MANUAL KEY

- Press **MANUAL** key to select ON / AUTO / OFF mode.
- ON mode is to turn on the timer, OFF mode is to turn off the timer.
- AUTO mode is to set the timer to programme mode. It will turn on or turn off according to the programmes you set.
- From ON to AUTO mode it will turn on until next OFF programme.
- From OFF to AUTO mode it will turn off until next ON programme.

##### 5.1.2.8.3 LED INDICATOR

LED light is on when the boiler is operating in heating mode.

#### 5.1.3 TO RESET TIMER:

Press reset button to reset the timer unit.

#### **NOTE:**

Once the reset button is pressed, the stored time and programme will be cleared to initial state.

*N.B.: When the clock is either "programmed" on, or is on constant, the red indicator will illuminate*





**Chartists Way, Morley, Leeds, LS27 9ET.**

**Telephone: (0113) 252 7007**

**Tfax: (0113) 238 0229**

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.